



	<b>PAGE</b>
<b>GENERAL SAFETY INSTRUCTIONS</b>	<b>1</b>
<b>GENERAL TECHNICAL DATA</b>	<b>3</b>
<b>STANDARD FEATURES ON ENGINE</b>	<b>6</b>
<b>BEFORE STARTING THE ENGINE</b>	<b>7</b>
<b>ADJUSTING THE CARBURETTOR</b>	<b>9</b>
<b>STARTING UP AND RUNNING IN</b>	<b>10</b>
<b>CLEANING</b>	<b>14</b>
<b>CHECKING AND MAINTENANCE</b>	<b>16</b>
<b>TROUBLESHOOTING</b>	<b>17</b>
<b>PARTS AND PRICE LIST</b>	<b>20</b>

